




Panasonic Lumix DMC-ZS8 Screen Panel Replacement

We will be disassembling the necessary parts of the camera so we can replace the screen panel.

Written By: Trevor Meyers

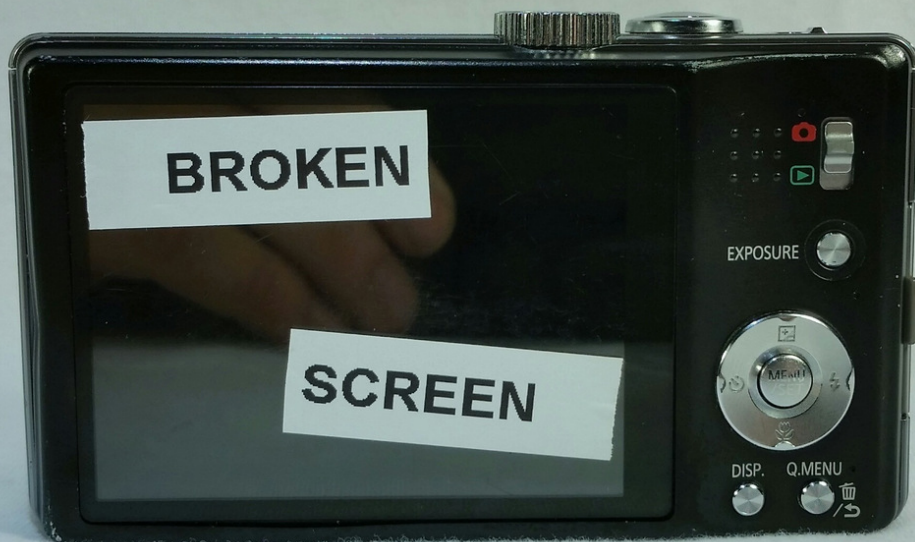

INTRODUCTION

This guide will show you how to remove all of the exterior panels of the camera in order to remove and replace the LCD screen panel.

Step 1 — Screen Panel



- This is the broken camera screen we will be fixing in this guide.

Step 2




- Remove all four screws from side panels.

Step 3




- Remove two screws from the bottom of the back panel and remove the back panel as shown in the picture.

Step 4

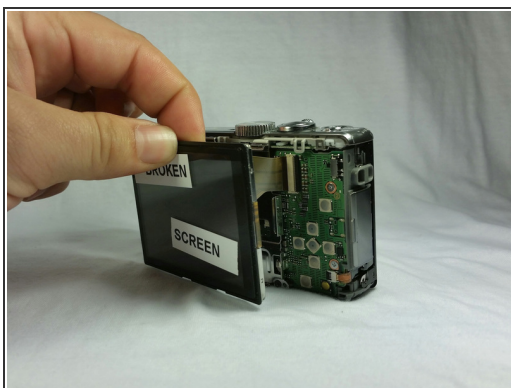

- Remove screen from mounting bracket and slide the wiring from the board connection.

Step 5

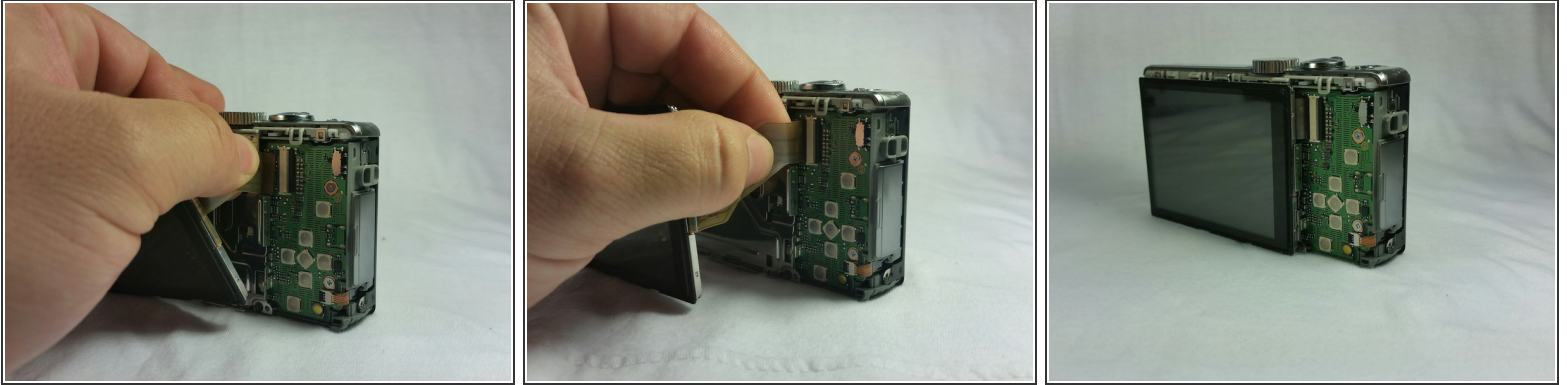

- Reconnect the new screen wiring into the motherboard as shown in the picture and replace the new screen into the mounting bracket.

Step 6



- Replace the front panel and install the screws on the bottom side of the camera.

Step 7



- Replace the side panels and replace all four screws to secure the side panels.

Step 8



- This is what your newly replaced screen should look like.

Now you have a new screen for your Panasonic DMC-ZS8.

This document was last generated on 2017-09-06 11:47:42 AM.